




ET1168H

JEEP WRANGLER FRONT SUB-FRAME BALL JOINT EXTRACTOR /INSTALLER **PAT M. 333280**




Video

- For extracting or installing the front subframe ball joint of Jeep Wrangler.
- Application: Jeep Wrangler.

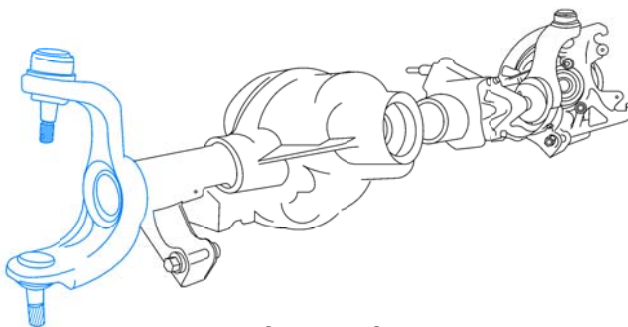

Front subframe of Jeep Wrangler

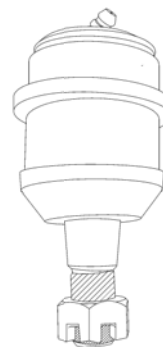


Upper Ball Joint



Lower Ball Joint


■ Instructions:

Removal of upper ball joint:

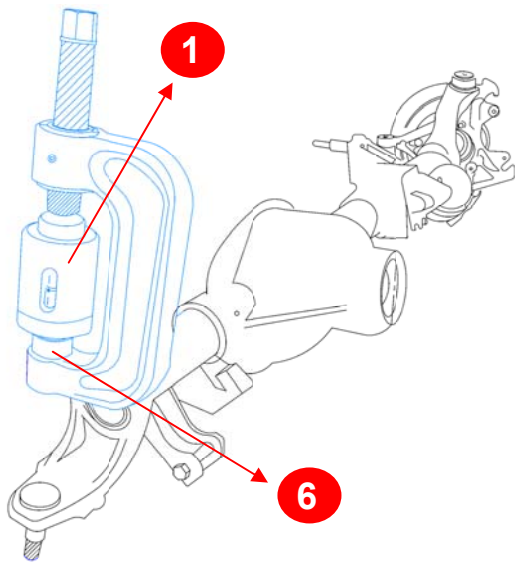


Fit the part no. 1 on the ball joint, fit part no. 6 under the ball joint, install H1168 main body and then turn the screw of H1168 to separate the ball joint.

Installation of upper ball joint:

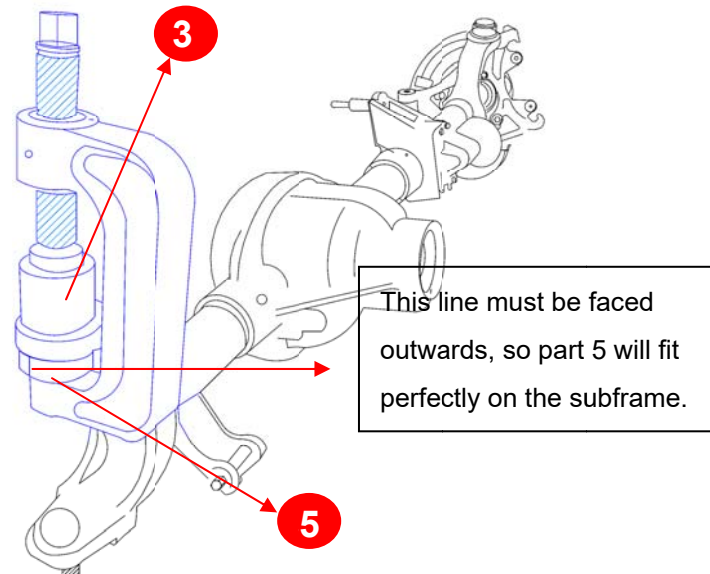


Fit the ball joint above the subframe, fit part no. 3 on the ball joint, fit part no. 5 under the subframe (A line is on part 5, and it must be faced outwards the subframe as photo shows.), install the main body of H1168, and then turn the screw of H1168 to push the ball joint back to its position to finish the installation.

Removal of lower ball joint:

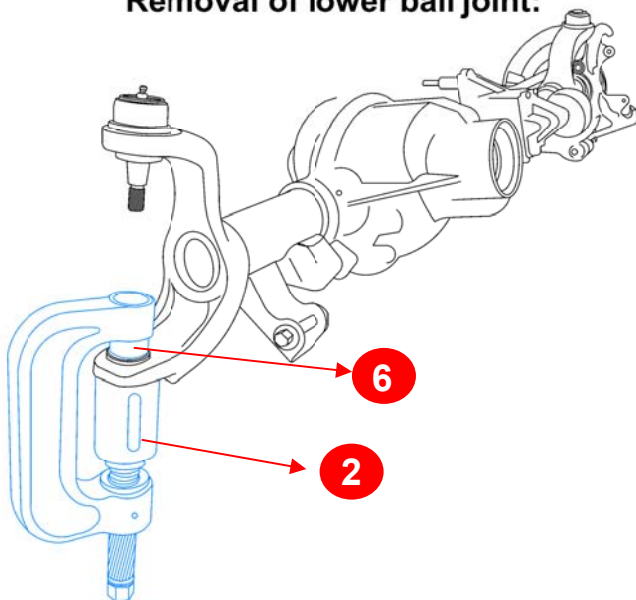

Fit the part no. 6 on the ball joint, fit part no. 2 under the ball joint, install the main body of H1168, and then turn the screw of H1168 to separate the ball joint.

Installation of lower ball joint:

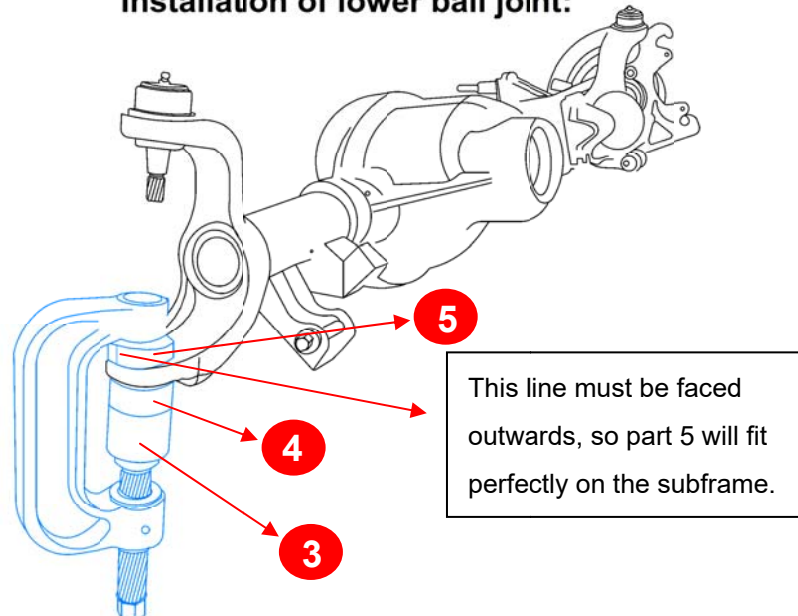

Fit the ball joint below the subframe, fit part no. 5 on the subframe (A line is on Part 5, and it must be faced outwards the subframe as photo shows.), fit part no. 4 and 3 under the subframe in order, install the main body of H1168 and then turn the screw of H1168 to push the ball joint back to its position to finish the installation.